

# BCS100 Capacitive Height Controller User Manual

Shanghai Friendess Electronic Technology Co., Ltd

[www.fscut.com](http://www.fscut.com)

**Ver3.22** BCS100 Capacitive Height Controller

Thank you for using our products!

This Manual describes BCS100 capacitive height controller in details, including system features, operation, installation instructions etc.

If you want to know more about CypCut laser cutting software that can improve the performance of height controller while using together, please refer to the help documents of the software. For any other information, please contact us directly.

Please read the Manual carefully before using the controller and relevant devices, so that you can make better use of it in future.

Along with continuous updating of product functions, there may be some differences between that you received and the Manual. We will apologize for any inconvenience. **BCS100 Capacitive Height Controller**

## Contents

Chapter 1 Introduction to Product.....	5
1 Introduction .....	5
2 Performance Description .....	5
Chapter 2 Operating Instructions.....	6
1 Description of Keys .....	6
2 Functional Hierarchical Graph.....	7
3 Main Interface.....	7
3.1 Hidden Functions of Main Interface .....	8

4 Calibration Interface .....	9
4.1 Servo Calibration.....	9
4.2 Capacitance Calibration .....	10
4.3 Self adjustment.....	12
5 Parameter Interface .....	12
5.1 Technical Parameters.....	13
5.2 Speed Parameters.....	14
5.3 Origin Parameters.....	14
5.4 Jog Parameters.....	15
5.5 Mechanical Parameters .....	15
5.6 Network Settings .....	17
5.7 Alarm Settings.....	18
5.8 Edge Settings.....	19
6 Test Interface.....	19
7 Interface of Advanced Settings.....	20
7.1 Product Information .....	20
7.2 Alarm Information .....	21
7.3 Restart.....	22
7.4 System Settings.....	22
7.5 Config file.....	22
8 Oscilloscope .....	23
Chapter 3 Installation Instructions.....	24
1 Introduction to Accessories.....	24
2 Installation Size (Unit: mm).....	24
2.1 Preamplifier .....	25
2.2 Master controller.....	26
3 Wiring Instructions.....	27
3.1 Interface Layout.....	27
3.2 Power Interface Instructions.....	27
3.3 Servo connection and setting .....	28
3.4 Description of Input and Output Interface .....	37
3.5 Description of Sensor Interface .....	37
4 Debugging Steps .....	37
Chapter 4 Alarm process and	
FAQ .....	39
<b>BCS100 Capacitive Height</b>	
<b>Controller</b>	
1 System alarm analysis.....	39
1.1 Z+/Z- limit enable.....	39
1.2 Out of Z range .....	39
1.3 Z- limit continue enable.....	39
1.4 Z+ limit continue enable .....	39
1.5 Servo alarm.....	39
1.6 Encoder moves abnormally .....	39
1.7 Encoder no response .....	40

1.8 Encoder deviation large .....	40
1.9 Capacity is 0 .....	40
1.10 Local capacity small .....	40
1.11 Follow deviation large.....	41
1.12 Sample capacity large .....	41
1.13 Expiration of time .....	41
1.14 Battery lost lock .....	41
1.15 Jog nearby board .....	41
2 FAQ.....	41
2.1 Obvious vibration and mechanical shock in the following movement.....	41
2.2 The follower always hits the board during in following movement .....	42
2.3 The following height is different from the actual height.....	42
2.4 The follower cannot move up to the correct height.....	43
2.5 “Validation error, failed ARM upgrading” when upgrading.....	43
2.6 Follower moves up without contacting the board during calibration .....	43 <b>BCS100</b>

**Capacitive Height Controller**

# Chapter 1 Introduction to Product

## 1 Introduction

BCS100 capacitive height controller (hereinafter referred to as BCS100) is a high-performance control device which used closed-loop control method. BCS100 also

provides a unique Ethernet communication (TCP / IP protocol) interface, it can easily achieve many functions with CypCut software, such as automatic tracking of height, segmented piercing, progressive piercing, edge seek, leapfrog, arbitrary setting of lift-up height of cutting head. Its response rate is also improved greatly. Especially in servo control aspects, its running speed and accuracy should obviously be better than other similar products, owing to dual closed-loop algorithm of speed and position.

## 2 Performance Description

- Sampling rate: 1,000 times per second.
- Static measurement accuracy: 0.001 mm.
- Dynamic response accuracy: 0.05 mm.
- Following range: 0-25 mm.
- The signal will not decay with strong capacity of resisting when the length of signal transmission cable is up to 100m.
- Support network communications and U disk online upgrade.
- Adapt to any cutting head and nozzle.
- Support alarm while hitting the board and beyond the edge.
- Support edge detection and automatic inspection.
- Automatic calibration process, with fast and easy operations.
- Support leapfrog and segmented piecing.
- Support oscilloscope functions to detect the capacitance in real time.

The comparison of new and old products are shown as below:

**Performance index BCS100 V2.0 BCS100 V3.0**

MaxMoving Speed 400mm/s 999mm/s

Max Acceleration 0.4G 2G

Capacitance Mutation Restraint 5% 10%

Min Inflexibility Requirement 5Hz 2Hz

DA Resolution 12 bit 16 bit

DA Zerodrift 16mv 3mv

DA Response Time 5ms 0.01ms

Positioning Accuracy 0.05mm 0.01mm **F1 F2 F3 F4**

1 2 3

4 5 6

7 8 9

. 0

变速

SHF

确定

ENT

取消

ESC

跟随快

FAST

跟随关

SHUT

跟随慢

SLOW

跟随开

FOLLOW

跟随高

+0.1

跟随低

-0.1

停止

STOP

回原点

ORG

**BCS100 Capacitive Height Controller**

# Chapter 2 Operating Instructions

## 1 Description of Keys

### Keyboard Function

Functional

key Achieve the functions prompted by the interface.

Number

key

Decimal

point

Backspace

key : Used for digital input, and mainly for parameter input

Arrow key

: Used for switching cursor and inching follower, and the key of “SHF” can switch the jog speed.

Control key

:

<SHUT>: The cutting head will automatically rise to the stop position while shutting the follower.

<FOLLOW>: Open the following function.

<FAST> and <SLOW>: Used for adjusting the following gain level.

<+0.1> and <-0.1>: Used for adjusting the following height.

<STOP>: Immediately stop all movements.

<ORG>: Immediately implement the movement to go back to the origin and correct mechanical coordinates.

<ENT>: Confirm the current operation.

<ESC>: Cancel the operation and go back. ....

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

...

Current State

Follow height

Dynamic Error

Z coordinate

Current Capacity

Jog Speed

Follow level 1-9 Function

## BCS100 Capacitive Height Controller

## 2 Functional Hierarchical Graph

The functional hierarchy of BCS100 is as shown below:

## 3 Main Interface

It will automatically enter <main interface> after the system is powered on and the initialization is completed, as shown below: **BCS100 Capacitive Height Controller**

The displays on the main interface include:

**Current status:** display the current motion state of the following system. The motion states are as follows:

- A. Stopped: Z-axis is in an idle state.
- B. Decel: There will be a very short transition state for slow stop after receiving a stop instruction in motion state. It will change into “stop” state after completely stopping.
- C. Moving: It is the movement of Z-axis while lifting up during processing.
- D. Follow: The follower follow the board while conduct punching and cutting operations.
- E. Origin: Go back to the mechanical origin of Z-axis.
- F. Jogging: Manually jog Z-axis.
- G: Lift up: It is the process to shut the follower off, and lift it to the stop position.

**Following gain level:** The level of following gain ranges from 1 to 30. The large level is, the smaller average error is, the quicker follow acts, and the stronger slope move ability is. But if gain is too high, there may be self-oscillation. It is recommended

to set this parameter by self adjustment.

**Following height:** The actual following height can be adjusted with a step of 0.1mm after pressing the button <+0.1> and <-0.1>. The following mode can be changed through pressing <SHUT> and <FOLLOW>. After pressing “SHUT”, the axis

will automatically raise to the stopping coordinates (it defaults to the position of  $Z=0$ ; the stopping coordinates can be modified after pressing <F2> to enter the parameter interface).

In addition, in the Ethernet control mode, the following height is set by CypCut software.

**Dynamic error:** In the following state, this value reflects the real-time error during following movement.

Distance H between follower and board surface: Within the capacitance

measurement range (calibration range), the distance between follower and board surface is “following height” plus “dynamic error”. When exceeding the measuring range, “set following height” plus “dynamic error” is identically equal to the calibration range.

**Current Z-axis coordinates:** After homing to origin, a mechanical coordinate system is established at Z-axis. The coordinate will increase when moving down.

**Current capacitance value C:** The principle of systematical sampling is to get the distance through measuring the capacitance between the follower and polar plate. The closer the follower is to the board, the greater the capacitance value is. The capacitance will change to Zero while the follower hits the board.

**Jog speed of Z-axis:** <L> represents low jog speed and <H> represents high jog speed. The jog speed stalls can be switched through pressing the button <SHF>. You can press the buttons <↑> and <↓> to jog.

### 3.1 Hidden Functions of Main Interface

#### Key Functions BCS100 Capacitive Height Controller

- <3> Set follow parameters.
- <4> Real-time following error oscilloscope.
- <5> Real-time monitor oscilloscope of capacitance.
- <6> Capacitance-distance curve.
- <7> Record the current capacitance.
- <9> Start the follower of edge cutting.
- <0> Set the current Z-axis coordinates to be 0.

## 4 Calibration Interface

In the main interface, press the key <F1> to enter <calibration interface>, as shown below:

After BCS100 was installed and used as first time, do servo calibration first.

Then return origin, do capacitance calibration. At last, do self adjustment. At the next time, do capacitance calibration is enough.

### 4.1 Servo Calibration

The purpose of servo calibration is to eliminate the zero drift of servo motor. Press the key <1> to enter the interface of <servo calibration>, as shown below:

During servo calibration, the motor vibrates back and forth with small amplitude, so it is required to first jog the motor to the mid-travel, and thus prevent from exceeding

the travel range while vibrating. And then press <ENT> to begin calibration.

The system will return to the previous interface after completing the automatic **BCS100 Capacitive Height Controller** calibration.

### 4.2 Capacitance Calibration

The purpose of follower calibration is to measure the corresponding relationship of capacitance and position between the follower and board. Press <2> to enter the interface of <follower calibration>, as shown below.

If no setting has been conducted before, press <F4> to set calibrated parameters.

### Parameter Description

Calibration

Distance

It is required to record the capacitance data within the range for calibration, and the default is 25mm. When the travel of Z-axis is too short, users can appropriately reduce the value.

Board

material Set the material of the following object.

Press <ENT> to save the parameters and return to the previous interface.

Before calibration, first fog the follower and make it close to the board (larger than 1mm from the board), and keep the board still without vibrations. Then press <ENT> to

begin calibration.

The calibration process can be done automatically within ten seconds. Users can press the <Stop>button to forcibly terminate the calibration. After the calibration is complete, there are two standards, and four grades of “excellent”, “good”, “not good” and “poor” are respectively set for each standard. The automatic calibration steps are as below: **BCS100 Capacitive Height Controller**

- (1). Head moves down slowly and checks if board is hit.
- (2).After head hits the board, moves up for 2mm, checking the stability.
- (3).Head moves down slowly and checks if board is hit for the second time.
- (4).If board is hit, head moves up for the calibrate range, checking the smoothness and the capacitance characteristic.

If one of the steps is not executed, and there is alarm after calibration, hardware or connection problem should be considered. An easy way to check the problem is: touch the spray by metal and see if capacitance changes. If the change is low(in 200) or the capacitance is always 0, hardware or connection problem is proved. In addition, considered to safe and static electricity factor, touch the spray by hand when system is powered is not recommended.

The meaning of calibration result is as below:

**Stability:** It reflects the static characteristics of the capacitance. If the standard is not ideal after calibration, the reason may be due to the vibration of the board or strong

external interference.

**Smoothness:** It reflects the dynamic characteristics of the changes in capacitance during calibration.

These two standards at least should be “medium”, or the system may not be able to be used normally. In relatively ideal conditions, the two standards should be “excellent” or “good”.

**Effective value:**It’s difference of capacity from 0.5mm nearby board to infinity. If the value is large, follow precision and stability is better.

After pressing <ENT> to save the calibration results, capacitance-distance curve

will be displayed. Normal curve should be smooth, as shown below:

If the curve is not smooth with downs or glitches, the results are not ideal and re-calibration is required. If the results are still not ideal after repeated calibration, users

should reexamine the hardware installation and wiring of the system. In addition, users

can view the calibrated curve after pressing button<6> on the main interface.

If calibrate failed, alarm is as shown below:

### **Alarm Description**

Hit board over time

When calibrating, if the cutting head moves down and check no board is hit in long time, there will be this alarm. How to check what happened? First, ensure the head is near the board before calibration (in about 5mm).

Next, check if the hardware and connection are right.

Last, try to do calibration again. If the head does not **BCS100 Capacitive Height Controller**

move when calibrating, maybe the resolution ratio of analog voltage output is not enough. You should try to modify the speed-voltage gain less.

Leave board

overtime Check if the hardware and connection are right.

Sample overtime Do calibration again.

Always hit board Please refer to “Leave board overtime” alarm.

Capacity changes

abnormally

Do calibration again. Take care jog near the board at about 1~5mm before calibration.

### **4.3 Self adjustment**

Press <3>to enter the interface of<Self adjustment>, as shown below:

Before adjustment, it should be confirmed as below:

- Servo calibration is done.
- Origin is done.
- Capacitance calibration is done.
- There is a board below the head to be followed.

The course of adjustment is follow again and again to optimize the internal parameter. The optimization result is as shown below:

Press <ENT> to save the parameters. The meaning is as shown below:

### **Parameter Description**

Follow down

gain lv

The larger it is, the faster head follows. Too large level will result in large deceleration. This parameter can be only set by self adjustment. And follow level parameter is also set at the

time after adjustment.

## 5 Parameter Interface

On the main interface, press <F2> to enter <parameter interface>, as shown **BCS100 Capacitive Height Controller**

below:

Users must correctly set the parameters above when using BCS100 for the first time. Especially, “mechanical parameters” should be set correctly, or the system cannot

work normally.

### 5.1 Technical Parameters

Press <1> to enter the interface of <technical parameters>, and the first page is as shown below:

The descriptions of parameters are as shown below:

#### Parameter Description

Z-Rang Set Z rang. Immediately stop when exceeding the travel during running, and give an alarm of “Out of Z Rang”.

DockPosition Set the target location of the follower after completely processing the program.

Mid Position Set a coordinate, and move to the coordinate through pressing <←> and <→> on the main interface.

Punch height Set the spacing distance between the follower and board during punching movement.

When the cursor selects the parameter of “aligning position”, “stopping coordinate” or “Z-axis travel”, there will be one more menu for [F1]. And press [F1] to set the current parameters by jog mode.

Press <ENT> for the following page, and continue to set process parameters. The second page is as shown below: **BCS100 Capacitive Height Controller**

These parameters are mainly used in I/O control mode. These parameters will not take effect in Ethernet control mode.

The descriptions of the parameters are as shown below:

#### Parameter Description

IN1 following mode

When input port 1 is effective, direct following mode is used, that is, punching-delay-following.

Punching delay Delay time during punching.

Progressive

speed Speed when progressively follow to the cutting height.

When dropping to the punching position, output port 4 will give a 200ms of effective signal. When dropping to the cutting height, output port 1 will give a constant

effective signal.

### 5.2 Speed Parameters

Press <2> to enter the interface of “speed parameters”, as shown below:

The descriptions of parameters are as shown below:

**Parameter**

**name**

**Description**

Moving  
speed

Up/Down Speed of Follower: The recommended setting is that the servo motor should run close to rated point, so as to improve efficiency and ensure stable running of system.

Acceleration Set the acceleration of follower for following and moving.  
Maxfollow

The Max Following Speed: It depended on Acceleration and the type of the nozzle. The value increases with the increasing Acceleration, and becomes higher with the higher capacity-sensitive nozzle.

**5.3 Origin Parameters**

Press <3> to enter the interface of <Origin parameters>, as shown below: **BCS100**

**Capacitive Height Controller**

The descriptions of parameters are as shown below:

**Parameter Description**

Whether to origin after  
power-on

Set whether to automatically reset after power-on, and set the option to be Yes after debugging.

Whether to return to  
dock position

Set whether to go back to the set dock position after completing reset.

Origin speed Set the fast movement speed to go back to the origin.

Return distance Set the return distance after touching the origin switch. This location is coordinate zero.

**5.4 Jog Parameters**

Press <4> to enter the interface of <jog parameters>, as shown below:

The descriptions of parameters are as shown below:

**Parameter Description**

Jog speed low Set the speed of Gear L during jog movement.

Jog speed high Set the speed of Gear H during jog movement.

Software limit

Determine whether or not to enable the soft limit while setting jog. If used, the soft limit should not jog to the position of negative coordinate or below the following height, so as to avoid hitting the limit or board during jog movement. Soft limit protection function only becomes effective on the main interface.

Only the jog function on the interface of <test> is open-loop controlled. The jog

function on the functional testing interface will not be affected when encoder signal is abnormal.

### 5.5 Mechanical Parameters

Press <5> to enter the interface of <mechanical parameters>, and Page 1 is as shown below: **BCS100 Capacitive Height Controller**

Press <ENT>, Page 2 is as shown below:

Press <ENT> again, Page 3 is as shown below:

The descriptions of parameters are as shown below:

#### Parameter Description

Lead screw pitch

Set the travel of the transmission mechanism per revolution, such as screw pitch (lead). In theory, the greater the screw lead, the faster the running of Z-axis, and it is recommended to use the ball screw with a lead of 5mm.

Max RPM(rotate speed per minute)

Set the allowable upper limit of rotational speed of servo motor according to the characteristics of motor and load. Generally, it does not exceed 4,500 rev / min.

Speed-voltage gain

Set the actual rotational speed corresponding to each volt. The speed should be consistent with the parameters in the driver, and the recommended value is 500 rev / min corresponding to each volt.

Pulses per round

Set the number of pulses fed back by the encoder of servo motor per revolution. The number should be consistent with the parameters in the driver.

Direction of servo Set the rotation direction of servo.

Direction of

encoder Set the direction of pulse feedback of encoder.

Servo type 0 represents the servo of Panasonic A5 、 Mitsubishi J3 series、 **BCS100 Capacitive Height Controller**

Schneider Lexium23D or Fuji A5. 1 represents the servo of Yaskawa  $\Sigma$ -V or Delta ASDA series. 2 represents the servo of Teco JSDEP series. The principles of zero-speed clamp, logic of input and output signals and system control parameters are different when the servos are different.

Logic of limit input

Set the logic of limit input port (IN5~6) (0: normally opened / 1: normally closed).

Logic of General

input

Set the logic of universal input port (IN1~4) (0: normally opened / 1: normally closed)

IO control mode

If it is set to be 0, the follower will move down when IN1 is enabled, while the follower will shut when IN1 is disabled. If it is set to be 1, after IN1 become disabled, the follower can move up only after setting IN3 to be enabled. (The parameter is ignored when using network communication)

### 5.6 Network Settings

Press to enter the interface of <network settings>, as shown below:

When using CypCutlaser cutting software of our company, lift up by arbitrary height, leapfrog, segmented punching; flying light path compensation and other advanced functions can be easily achieved through the network. See the manual for CypCut software for details. When not using CypCut software, please shut down the network, or start-up process will become slow.

When using the network functions, it is recommended to directly connect PC and BCS100 by crossed wire. IP address of PC should be in the same network segment with

BCS100 (10.1.1.xxx, which cannot be same to BCS100). The gateway should be set in

the same network segment, and the last number should be 1, such as 10.1.1.1. As shown

below: **BCS100 Capacitive Height Controller**

Note: When the computer is connected to other network equipments concurrently, such as IPG fiber laser (network connection mode), and each equipment should be set in different network segments. For example, the equipments can be respectively set to be 10.1.2.x and 192.168.1.x.

2. After the IP of network card is reset, please disable-enable the network card again, so as to make the IP settings of the network card to take effect.

### 5.7 Alarm Settings

Press <7> to enter the interface of <alarm settings>, as shown below:

**Parameter**

**name**

**Description**

Max follow deviation

It is the maximum allowable following error of BCS100. After the cutting head is in place, the controller will give an alarm for too large following error if the following error exceeds the set alarm value due to the movement beyond the plate boundary or severe vibrations of board. **BCS100 Capacitive Height Controller**

Max follow

delay

Set the filter time of following error alarm. The greater the value, the slower the response and the stronger the ability to filter out interference.

Hit board

delay

When the follower hits the board and the duration reaches the time limit, the follower will automatically move up for protection and output alarm signal.

Stop hit alarm

enable

This parameter indicates if hit board alarm is active when the follower is in stop state. It is safer when the value equals 1. And when you need to adjust the center of laser by stick adhesive tape, or when you do not want the controller always alarm in no plastic film, it is convenient to set it to 0.

Limit alarm

When it is set to be 1, upper and lower limit alarm function will be started. The follower will automatically move up when encountering upper / lower limit and then give an alarm signal.

When it is set to be 0, alarm function is disabled.

### 5.8 Edge Settings

Press <8> to enter the interface of <edge settings>, as shown below:

#### Parameter name Description

Saturation speed The max speed to follow down after head cutting out of board to prevent deep drop damage.

Cut in check When check the H is lower than this parameter, the head start follow.

Cut out check If it is checked that H position is larger than cut “cut out check”

Cut out delay and last more than “cut out delay”.

Height Through cut height: Set the Z position to locate to before following.

## 6 Test Interface

On the main interface, press <F3> to enter the interface of <functional test>, as shown below: **BCS100 Capacitive Height Controller**

Users can test whether the state of keys, input and output ports and the rotation direction of motor are correct. After completing the installation for the first time, users

must enter the interface for switch jog to determine whether the rotation direction of motor and the director of encoder signal are correct. If the rotation direction of motor is

incorrect, users need to modify the “servo direction” parameters in “mechanical parameters”, and then conduct open-loop jog to determine whether the direction of encoder signal is correct. If it is prompted that the direction of encoder is incorrect,

users need to modify the “encoder direction” parameters in “mechanical parameters”. The input and output ports of the interface are defined as below:

### **Input**

### **port**

### **Definition Output**

### **t port**

### **Definition**

IN1 Follow to cutting height OUT1 Signal for following to place

IN2 Move to aligning coordinate OUT2 Stay to position signal

IN3 Lift-up signal OUT3 Alarm output signal

IN4 Stopping signal OUT4 Punching signal

IN5 Negative limit OUT5 Servo clearing alarm (servo signal)

IN6 Positive limit OUT6 Servo enabled (servo signal)

IN7 Servo alarm (servo signal) OUT7 Zero speed clamp (servo signal)

## **7 Interface of Advanced Settings**

On the main interface, press <F4> to enter the interface of <advanced settings>, as shown below:

### **7.1 Product Information**

Press <1> to enter the interface of <product information>, as shown below: **BCS100**

#### **Capacitive Height Controller**

Users can view the following on this interface:

#### **Information Description**

Version

For example v3.0.3032 is program version number. “2D” represents being used for plane cutting. “3D” represents being used for 3D mechanical cutting.

ID number BCS100 global only serial number. Such as 201111180100

Expiration The remaining time for BCS100, such as 30 days or unlimited.

Current Time BCS100 current internal date

We will release a new version of the program regularly. The update step is shown as below:

1. Find a U disc, format it to FAT/FAT32 (we don't support NTFS format)
2. Copy the upgrade files to the root directory of the U disc, do not rename the files.(For BCS100V2.0, there is two files named <BCS.AFM> and<BCS.FFM>. For BCS100V3.0, there is only one file named <BCV3.AFM>)
3. Insert the U disc to BCS100's USB interface.
4. Reboot the BCS100 (Method 1:Power off then power on. Method 2: Use the „restart“ function)
5. Wait until upgrade progress bar 100%finish, then the buzzer beep.
6. Remove the U disc. Check the software version.

When the service time of BCS100 expires, alarm information (service time expires) will be displayed on the main interface, and key functions cannot be

implemented, such as following. Users can press [F1] to register and enter <registration interface>, and then continue to use the height controller after inputting the correct registration code.

### 7.2 Alarm Information

Press <2> to enter the interface of <alarm information>, as shown below: **BCS100 Capacitive Height Controller**

In this interface, the previous alarm events are displayed in a list. The system can record as many as 20 alarm events. Users can clear the alarm list after pressing <F1>. Users can refer the meaning of each alarm to Chapter 5.

### 7.3 Restart

Users can press <3> to restart BCS controller. This operation is equal to that the system is powered down and then powered on. Users can first insert USB disk to BCS when they want to upgrade the program, and complete the upgrade with restart function,

which can avoid the trouble to power down and then power on the system.

### 7.4 System Settings

Users can press <4> for system settings, and then enter the interface of <system settings> after inputting the password of 61259023.

#### Parameter Description

Application 0: plane cutting applications. 1: 3D cutting application.

Language 0: Chinese version. 1: English version.

User

configuration Special customization function

Parameter

protect

0: Parameters are not encrypted. 1: Parameters are encrypted.

Users need to enter the password if they want to modify the parameters. Password: 11111111

### 7.5 Config file

Press <5> to enter config file interface, is as shown below: **BCS100 Capacitive Height Controller**

The function of configuration file includes:

- Copy parameter of specify machine to all same type machines.
- Make boot logo of BCS100.
- Back up BCS100's parameter.

Make notice of:

- Use a USB disk with FAT/FAT32 format.
- The configuration file's format is xxx.CFG. When import file from USB disk, make sure there is only one .CFG file at the root directory of the disk.
- The file export to USB disk named EXPORT.CFG. If there is a file EXPORT.CFG in the USB disk before exporting. This file will be covered.

## 8 Oscilloscope

Oscilloscope function is one of the unique functions of BCS100. Users can enter the interface of <capacitance oscilloscope> after pressing <5> on the main interface. The principle of the oscilloscope is to display capacitance value C in real time. It also displays the maximum value (MAX), minimum value (MIN), difference between the MAX and MIN (DIF) and average value (AVE) of the measured capacitance. As shown below:

Please observe the changes of capacitance while keeping the cutting head and board stationary. The greater DIF value, the greater the interference, or the more unstable the capacitance is.

Users can determine the interference size in reference with the values below:

**DIF value Interference size**

- 0~10 None
- 10~20 Very little
- 20~30 Little
- 30~50 Average
- 50 以上 Large **BCS100 Capacitive Height Controller**

## Chapter 3 Installation Instructions

### 1 Introduction to Accessories

Capacitance control system is composed of BCS100 controller, preamplifier, laser cutting head and cable, as shown below:

**Accessory name Number Standard type Optional type**

- Master controller 1 BCS100
- Preamplifier 1 BCL\_AMP
- Thermostable cable 1 SPC-140(140mm) SPC-180(180mm)
- Sensor signal cable 1 HC-15(15m) HC-15(20m)
- Servo drive cable 1 C15-2.5(2.5m) C15-1.5(1.5m), C15-4(4m)
- DB15 plug (pin) 1 DB15M
- DB15 plug (jack) 1 DB15F
- Manual 1

### 2 Installation Size (Unit: mm).

4  
29  
3  
4  
31  
03.004

**BCS100 Capacitive Height Controller**

#### 2.1 Preamplifier

The appearance and installation size of preamplifier is as shown below:

Appearance of amplifier  
Installation of amplifier

uneedcnc

## BCS100 Capacitive Height Controller

### 2.2 Master controller

The appearance and installation size of preamplifier is as shown below:...

Dorsal view

24V 0V

To machine main

metal part

PG

## BCS100 Capacitive Height Controller

## 3 Wiring Instructions

### 3.1 Interface Layout

The detailed interface layout of BCS100 wiring terminal is as shown below:

### 3.2 Power Interface Instructions

The machine casing is the negative electrode of the measured capacitor. In order to ensure the steady operation of measured circuit, it is required to reliably connect “FG pin” of power interface to the machine casing (i.e., have good conduction with machine casing), and preamplifier casing also must have good conduction with machine casing.

The specific indicator is that D.C. impedance is always less than 10 Ω, or the actual following effect may be poor. 8 7 6 5 4 3 2 1

15 14 13 12 11 10 9

**BCS100 Capacitive Height Controller**

**3.3 Servo connection and setting**

**Pin Color Signal name**

- 1 Yellow** DA (with an analog output of -10~10V)
- 2 Blue** 0S (Zero speed clamp)
- 3 Black** A+ (Encoder A+)
- 4 Orange** B+ (Encoder B+)
- 5 Red** Z+ (Encoder Z+)
- 6 Green** SON (Servo on)
- 7 Green-black** CLR (Clear alarm)
- 8 Brown** 24V (Power output)
- 9 Yellow-black** AGND (Analog ground)
- 10 Blue-black** 0V (Power ground)
- 11 Black-white** (Encoder A-)
- 12 Orange-black** (Encoder B-)
- 13 Red-black** Z- (Encoder Z-)
- 14 Purple** ALM (Alarm signal)
- 15 Brown-black** 0V (Power ground)

Fig. No. No. 001

00 1

000 9

0 3

0 11

0 4

0 12

0 5

0 13

00 8

00 14

00 15

00 6

00 7

14 000 0000

01 00

02 00

03 00

04 00

05 00

06 00

07 00

08 00

09 00 00

20 A 412  
 26 414  
 27 416  
 28 418  
 29 420  
 30 422  
 31 424  
 32 426  
 33 428  
 34 430  
 35 432  
 36 434  
 37 436  
 38 438  
 39 440  
 40 442  
 41 444  
 42 446  
 43 448  
 44 450  
 45 452  
 46 454  
 47 456  
 48 458  
 49 460  
 50 462  
 51 464  
 52 466  
 53 468  
 54 470  
 55 472  
 56 474  
 57 476  
 58 478  
 59 480  
 60 482  
 61 484  
 62 486  
 63 488  
 64 490  
 65 492  
 66 494  
 67 496  
 68 498  
 69 500  
 70 502  
 71 504  
 72 506  
 73 508  
 74 510  
 75 512  
 76 514  
 77 516  
 78 518  
 79 520  
 80 522  
 81 524  
 82 526  
 83 528  
 84 530  
 85 532  
 86 534  
 87 536  
 88 538  
 89 540  
 90 542  
 91 544  
 92 546  
 93 548  
 94 550  
 95 552  
 96 554  
 97 556  
 98 558  
 99 560  
 100 562  
 101 564  
 102 566  
 103 568  
 104 570  
 105 572  
 106 574  
 107 576  
 108 578  
 109 580  
 110 582  
 111 584  
 112 586  
 113 588  
 114 590  
 115 592  
 116 594  
 117 596  
 118 598  
 119 600  
 120 602  
 121 604  
 122 606  
 123 608  
 124 610  
 125 612  
 126 614  
 127 616  
 128 618  
 129 620  
 130 622  
 131 624  
 132 626  
 133 628  
 134 630  
 135 632  
 136 634  
 137 636  
 138 638  
 139 640  
 140 642  
 141 644  
 142 646  
 143 648  
 144 650  
 145 652  
 146 654  
 147 656  
 148 658  
 149 660  
 150 662  
 151 664  
 152 666  
 153 668  
 154 670  
 155 672  
 156 674  
 157 676  
 158 678  
 159 680  
 160 682  
 161 684  
 162 686  
 163 688  
 164 690  
 165 692  
 166 694  
 167 696  
 168 698  
 169 700  
 170 702  
 171 704  
 172 706  
 173 708  
 174 710  
 175 712  
 176 714  
 177 716  
 178 718  
 179 720  
 180 722  
 181 724  
 182 726  
 183 728  
 184 730  
 185 732  
 186 734  
 187 736  
 188 738  
 189 740  
 190 742  
 191 744  
 192 746  
 193 748  
 194 750  
 195 752  
 196 754  
 197 756  
 198 758  
 199 760  
 200 762  
 201 764  
 202 766  
 203 768  
 204 770  
 205 772  
 206 774  
 207 776  
 208 778  
 209 780  
 210 782  
 211 784  
 212 786  
 213 788  
 214 790  
 215 792  
 216 794  
 217 796  
 218 798  
 219 800  
 220 802  
 221 804  
 222 806  
 223 808  
 224 810  
 225 812  
 226 814  
 227 816  
 228 818  
 229 820  
 230 822  
 231 824  
 232 826  
 233 828  
 234 830  
 235 832  
 236 834  
 237 836  
 238 838  
 239 840  
 240 842  
 241 844  
 242 846  
 243 848  
 244 850  
 245 852  
 246 854  
 247 856  
 248 858  
 249 860  
 250 862  
 251 864  
 252 866  
 253 868  
 254 870  
 255 872  
 256 874  
 257 876  
 258 878  
 259 880  
 260 882  
 261 884  
 262 886  
 263 888  
 264 890  
 265 892  
 266 894  
 267 896  
 268 898  
 269 900  
 270 902  
 271 904  
 272 906  
 273 908  
 274 910  
 275 912  
 276 914  
 277 916  
 278 918  
 279 920  
 280 922  
 281 924  
 282 926  
 283 928  
 284 930  
 285 932  
 286 934  
 287 936  
 288 938  
 289 940  
 290 942  
 291 944  
 292 946  
 293 948  
 294 950  
 295 952  
 296 954  
 297 956  
 298 958  
 299 960  
 300 962  
 301 964  
 302 966  
 303 968  
 304 970  
 305 972  
 306 974  
 307 976  
 308 978  
 309 980  
 310 982  
 311 984  
 312 986  
 313 988  
 314 990  
 315 992  
 316 994  
 317 996  
 318 998  
 319 1000

**BCS100 Capacitive Height Controller**

**Wiring diagram of Panasonic servo**

Corresponding to the wiring modes above, the servo parameters are set as follows:

Panasonic A5 series:

**Parameter**

**No.**

**Recommended value**

**Description**

Pr001 1 Control mode: It must be set speed mode.

Pr002 3 Real-time automatic adjustment: The recommended setting is vertical axis mode.

Pr003 17 Servo rigidity, the recommended range is from Grade 14 to Grade 20.

Pr302 500 Input the gain of speed command.

Pr315 1 Enable zero speed clamp function. Pr315: 0, 1

1 3C  
 01 15 00  
 04 16B 007  
 10 16B  
 11 16B  
 00 2  
 6 3C  
 01 17 00  
 00 10  
 BCS100 series Yaskawa  $\Sigma$ -V series servo motor  
 00000000

**BCS100 Capacitive Height Controller**

**Wiring diagram of Yaskawa servo**

Yaskawa  $\Sigma$ -V series:

**Parameter**

**No.**

**Recommended**

**value**

**Description**

Pn000 00A0 Speed control with zero-position fixation function.

Pn00B - Set to 0100 when using single-phase power.

Pn212 2500 Number of pulses output by the encoder per revolution. The pulse parameter of corresponding BCS100 per revolution is 10,000.

Pn300 6.00 The speed gain of corresponding height controller is 500 r/v/min.

Pn501 10000 Zero fixed value.

Pn50A 8100 Forward rotation is enabled.

Pn50B 6548 Reverse rotation is enabled.

01 18 007  
 04 000  
 11 00  
 22 00  
 23 00  
 30 00  
 33 00  
 34 00  
 35 00  
 36 00  
 37 00  
 38 00  
 39 00  
 40 00  
 41 00  
 42 00  
 43 00  
 44 00  
 45 00  
 46 00  
 47 00  
 48 00  
 49 00  
 50 00  
 51 00  
 52 00  
 53 00  
 54 00  
 55 00  
 56 00  
 57 00  
 58 00  
 59 00  
 60 00  
 61 00  
 62 00  
 63 00  
 64 00  
 65 00  
 66 00  
 67 00  
 68 00  
 69 00  
 70 00  
 71 00  
 72 00  
 73 00  
 74 00  
 75 00  
 76 00  
 77 00  
 78 00  
 79 00  
 80 00  
 81 00  
 82 00  
 83 00  
 84 00  
 85 00  
 86 00  
 87 00  
 88 00  
 89 00  
 90 00  
 91 00  
 92 00  
 93 00  
 94 00  
 95 00  
 96 00  
 97 00  
 98 00  
 99 00  
 100 00

Fig. No.

04-1

000-9

1-3

1-11

2-4

9-12

2-5

2-13

201-8

101-11

01-11

100-6

111-7

01-2

01-10

10-101

BCS100 servo interface Delta ASD-A servo 10pin interface

Model Name

### BCS100 Capacitive Height Controller

### Wiring diagram of Delta servo

Delta ASD-A series:

#### Parameter

#### No.

#### Recommended value

#### Description

P1-01 0002 Control mode: It must be set to speed control mode.

P1-38 2000 Set zero speed clamp value to the maximum.

P1-40 5000 The speed gain of corresponding height controller is 500 r/v/min.

P2-10 101 Set DI1 to SON, normally opened.

P2-11 105 Set DI2 to CLAMP, normally opened.

P2-12 114 Set speed command to external analog control.

P2-13 115 Set speed command to external analog control.

P2-14 102 Set DI5 to ARST, normally opened.

P2-22 007 Set DO5 to ALRM, normal close.

11-101

11-81

11-71

9-71

11-71

19 P2  
19 P3  
19 P4  
19 P5  
19 P6  
19 P7  
19 P8  
19 P9  
19 P10  
19 P11  
19 P12  
19 P13  
19 P14  
19 P15  
19 P16  
19 P17  
19 P18  
19 P19  
19 P20  
19 P21  
19 P22  
19 P23  
19 P24  
19 P25  
19 P26  
19 P27  
19 P28  
19 P29  
19 P30  
19 P31  
19 P32  
19 P33  
19 P34  
19 P35  
19 P36  
19 P37  
19 P38  
19 P39  
19 P40  
19 P41  
19 P42  
19 P43  
19 P44  
19 P45  
19 P46  
19 P47  
19 P48  
19 P49  
19 P50  
19 P51  
19 P52  
19 P53  
19 P54  
19 P55  
19 P56  
19 P57  
19 P58  
19 P59  
19 P60  
19 P61  
19 P62  
19 P63  
19 P64  
19 P65  
19 P66  
19 P67  
19 P68  
19 P69  
19 P70  
19 P71  
19 P72  
19 P73  
19 P74  
19 P75  
19 P76  
19 P77  
19 P78  
19 P79  
19 P80  
19 P81  
19 P82  
19 P83  
19 P84  
19 P85  
19 P86  
19 P87  
19 P88  
19 P89  
19 P90  
19 P91  
19 P92  
19 P93  
19 P94  
19 P95  
19 P96  
19 P97  
19 P98  
19 P99  
19 P100

BCS100 Capacitive Height Controller

Model name

### BCS100 Capacitive Height Controller

#### Wiring diagram of Teco servo

Teco JSDEP series:

#### Parameter

#### No.

#### Recommended value

#### Description

Cn001 1 Control mode: It must be set to speed control mode.

Cn002.2 1 Automatic gain. (Note: It is the parameter of the second figure of Cn002 )

Cn005 2500 Number of pulses output by the encoder per revolution. The number of pulses of corresponding BCS100 per revolution is 10,000

Cn026 4 Rigidity. Level 4 is the default.

Sn216 4000 Speed gain. The speed gain of corresponding

BCS100 is 400. Mitsubishi MR-J30A series

04 1

000 9

1- 3

1- 11

2- 4

3- 12

2- 5

2- 13

201 8

202 11

30 11

300 6

123 7

2 10

4 14

5 16

6 18

8 22

7 18

9 123

20 2008

12 200

13 200

18 202

40 2008

16 224

10 2

20 14

17 201

10 10

BCS100 Wiring Interface

04044 v01a P10 No. 10 P10

**BCS100 Capacitive Height Controller**

**Wiring diagram of Mitsubishi MR-J30A servo**

Mitsubishi MR-J30A series:

**Parameter**

**No.**

**Recommended**

**value**

**Description**

PA01 2 Control mode: It must be set to speed control mode.

PA15 10000 Number of pulses output by the encoder per



- P2-10 101 Servo IN1 function: SON
- P2-11 0 Servo IN2 function: Not used
- P2-12 5 Servo IN2 function: ZClamp
- P2-13~P2-17 0 Servo IN4~IN8 function: Not used
- P1-38 400 It's 40.0RPM, the zero compare value
- P1-01 2 Control mode: It must be set to speed control mode.
- P1-40 5000 Speed gain. The speed gain of corresponding BCS100 is 500 r/v/min
- P1-46 2500 Number of pulses output by the encoder per revolution. The number of pulses of corresponding BCS100 per revolution is 10,000.

00 1

000 9

0 3

0 11

0 4

0 12

0 5

0 13

00 6

00 14

00 6

00 7

00 1007

0 006

00 0006

00 000

00 000

00 0000

00 0000

0 000

0 00000

0 00000

00 000000

00 0000

00 0

00 00

00 00

BCS100Hardware Interface Fuji A2P0A2 24-Pin connector

Shielded wire

0 00000

**BCS100 Capacitive Height Controller**

## Wiring diagram of Fuji ALPHA5 servo

Fuji ALPHA5series:

### Parameter

No.

Recommended  
value

### Description

PA-101 01 Control mode: It must be set to speed control mode.

PA-108 2500 Number of pulses output by the encoder per revolution. The number of pulses of corresponding BCS100 per revolution is 10,000

PA-115 17 Servo rigidity, the recommended range is from Grade 14 to Grade 20.

PA-303 02 Forward rotation is enabled.

PA-331 6.0 The speed gain of corresponding height controller is 500 r/v/min.

01.1

002.9

01.3

01.11

01.4

01.12

01.5

01.13

001.8

002.14

001.6

002.7

01.9-007

01.00

01.00

01.00

01.20

01.00

01.20

001.0007-008

01.0001

01.0000

01.0007-008

01.0000

01.01

01.00

01.00

BCS100 servo motor SANYO R 10-Parameter

Shielded wire

36 0002

40 001 000

### BCS100 Capacitive Height Controller

#### Wiring diagram of SANYO R servo Parameter

**No.**

**Recommen-  
ded  
value**

**Description**

SY08 01 Speed control mode

Gr0.00 00 Auto tune

Gr8.25 5000 Speed gain. The speed gain of corresponding  
BCS100 is 500 r/v/min

Gr9.00 00 Motor rotate CW enable

Gr9.01 00 Motor rotate CCW enable

Gr9.26 00 Shut down servo gain switch

GrB.13 0

GrB.14 0

GrC.05 2500/8192 Number of pulses output by the encoder per  
revolution. The number of pulses of corresponding

BCS100 per revolution is 10,000: 2 3 4 5 6 7 8

9 10 11 12 13 14 15

1:Connect with pin 1 of the cable

2:Connect with pin 2 of the cable

3:Connect with pin 3 of the cable

4:Connect with shield of the cable

### BCS100 Capacitive Height Controller

#### 3.4 Description of Input and Output Interface

##### 15-pin male input and output interface

##### Pin Signal definition Pin Signal definition

1 24V (Power output) 9 IN7(General input)

2 IN8(General input) 10 IN9(General input)

3 OUT1 (Cutting in place) 11 OUT2 (Stay to position signal)

4 OUT3 (Alarm) 12 OUT4 (Punching in place)

5 IN1 (Cutting tracking) 13 IN2 (Move to aligning  
coordinate)

6 IN3 (Quick lift up) 14 IN4 (Stop)

7 IN5 (Upper limit) 15 IN6 (Lower limit)

8 0V (Power ground)

Notes:

1. Output ports (OUT1~OUT4) are all open drain output, and they are connected with the power ground for outputting.
2. Input ports (IN1~IN9) are all active low level input, and the input is enabled when the input ports are connected with the power ground.
3. When the cutting head punches to place, OUT4 will output a desired signal with a width of 200ms. When the cutting lead follows to the cutting height, OUT1 will output continuous desired signal.

### 3.5 Description of Sensor Interface

4-pin signal transmission cable of sensor can be manufactured with 3-pin shielded cable and 2 4-pin air plugs. It is required to connect Pin, 1, 2 and 3 together, and connect

Pin 4 to shielding layer during the manufacturing process.

## 4 Debugging Steps

After the installation, users need to debug the controller as follows:

Set servo parameters. See “servo parameters” in Chapter V for details.

After powering on and completing the initialization, enter the parameter interface **BCS100 Capacitive Height Controller** and set “mechanical parameters”.

Go back to <main interface> to check whether the travel switch is enabled. If it is an optoelectronic switch, the interface will display “upper limit is enabled” when blocking the upper limit with shade; it will display “lower limit is enabled” when blocking the lower limit.

Enter <test interface> to conduct open-loop jog, and check whether the rotation direction of motor is right. If the direction is wrong, please change the servo direction parameters. And then conduct open-loop jog again, please change the encoder direction

parameters if the encoder signal is inverse (mechanical parameters).

Enter <calibration interface>, and conduct “servo calibration” to eliminate the zero shift of servo.

Return to the origin manually, and turn on the power-on reset function on the interface of <reset parameters>.

Enter <calibration interface> and do “capacitance calibration” for the follower.

Modify other parameters as required after completing the steps above. **BCS100**

**Capacitive Height Controller**

## Chapter 4 Alarm process and FAQ

### 1 System alarm analysis

#### 1.1 Z+/Z- limit enable

When system checked Z+/Z- limit input is enabled, the alarm happens. The reason includes:

- Z+/Z- sensor detect something.

- Z+/Z- sensor is broken. Or it is used for long time, there is oil contamination and powder on the surface.
- The parameter of “Limit logic” can be set to normal open or normal close
- The wiring is not correct.

### 1.2 Out of Z range

When Z moves large then range, which is a parameter of system, the alarm will be throw out. If it is wrong alarmed, take attention in the range parameter, if the system returned origin, and if the encoder feedback is correct.

### 1.3 Z- limit continue enable

When system is returning origin, it moves back when z- sensor is enabled, but can’t quit the z- sensor enable area, the alarm happens. Take attention if the sensor is broken.

### 1.4 Z+ limit continue enable

When system is returning origin, it moves back to positive axis, but come to the z+ sensor enable area, the alarm happens. Take attention whether the Aligning coordinate or Dock coordinate is too large.

### 1.5 Servo alarm

When system checked NO. 14 input ALM is enabled, which reflect the servo alarm status, the alarm is shown on the screen. The reason of servo alarm includes:

- The servo alarms.
- The “Servo Type” parameter is not correctly set.
- Wiring is not correct.
- Electrical system disturbs the wire.

### 1.6 Encoder moves abnormally

When system keeps in stop status, the encoder feedback value changed, there will be this alarm. The reason lead to the alarm includes:

- The axis vibrates by outside force.
- Wiring wrong, the zero speed signal does no effect.

#### BCS100 Capacitive Height Controller

- Servo rigidity is very low.
- The encoder wire is disturbed. The shield is needed, and should be connect to the ground. Add some wire magnet ring is better.

### 1.7 Encoder no response

The system try to move, send out speed command as voltage, but the encoder feedback value does not change at all. The alarm happens. The reason includes:

- Wring error.
- Servo type is wrong. Servo must have speed control mode.
- Servo parameter is not correctly set. It should be switched to speed control mode.

### 1.8 Encoder deviation large

When the difference between destination position and feedback position is too large, the alarm happens. It reflects the servo can’t follow the speed command correctly. The reason includes:

- Encoder feedback direction is wrong. The relative parameter should be

modified.

- Wiring error or disturb make the encoder feedback wrong.
- The mechanic is stuck, the really position can't follow the destination position.

### 1.9 Capacity is 0

When system can't check the capacity of the spray, the capacity value is shown as 0 on the screen. The following situation may cause the alarm:

- The spray touched the board below.
- There is water in cutting head.
- The local capacity of the cutting head is large, which is out of the check range of the preamplifier.
- The preamplifier is broken.
- Connection is not fixed.
- In the internal of cutting head, the positive of capacity (spray) is short circle with the negative of capacity (the shell of machine).

### 1.10 Local capacity small

When local capacity changes less, the alarm happens. The reason includes:

- Connection or some part is changed or moved. You can do calibration again.
- Laser shoots on the spray, the temperature gets very high is short time.

Man's hands can't stay on the pray.

- Blow leads to the change of distance of positive pole (spray) and negative pole (shell of the machine).
- Connection is not fixed.
- The parameter of calibration range is low can also lead the alarm. In 2D mode 15mm is recommended. And 10mm is recommended in 3D mode. **BCS100**

#### Capacitive Height Controller

- One of the reason is the cutting fire and electronic affects the capacity sensor when the boardmaterial is stainless steel.

If there is plastic film on the surface of steel, remove the film first. Check if the machine is connect to the ground well. The following height should be large than 0.5 mm. Improve the blowing pressure.

### 1.11 Follow deviation large

When system check the H height (the distance between spray and board) changes large in short time in follow state, the alarm happens. The relative parameter is interpreted in Chapter 2.5.5. The alarm reason includes:

- Cut out of the board. There is nothing to follow below.
- Board is vibrating heavily.

### 1.12 Sample capacity large

When sampled capacity is larger than the largest capacity in calibration, the alarm happens. The reason includes:

- The spray touched the board below.
- There is water in cutting head.
- Connection is not fixed.

In the internal of cutting head, the positive of capacity (spray) is short circle with

the negative of capacity (the shell of machine).

### 1.13 Expiration of time

There is no more time permitted to use this system.

### 1.14 Battery lost lock

When unpacked the battery of the unregistered controller, the alarm happens.

User can remove the alarm by registering the controller.

### 1.15 Jog nearby board

When jogging the follower near the board, the alarm happens.

## 2 FAQ

### 2.1 Obvious vibration and mechanical shock in the following movement

➤ Amplifier casing or controller FG pin are poorly connected to the machine casing.

Machine casing is the negative electrode of the measured capacitor. When the conductivity of amplifier casing and machine casing is poor, the AC impedance between the positive and negative electrodes of the capacitor is large. Thus, the load of

measured circuit varies, which may lead to larger measurement error. If good mechanical connection cannot be achieved, users can add a wide wire(copper material is better) between amplifier metal casings to reduce AC impedance. The AC impedance

of single-point connection is greater than that of good mechanical connection. It is

#### **BCS100 Capacitive Height Controller**

required to make the AC impedance less than 10 ohms.

➤ Too large servo rigidity

Mechanical shock and obvious vibration may be caused during the movement due to too large servo rigidity. For example, it is recommended that the servo rigidity of Panasonic MINAS A5 series should not be above Level 19.

➤ Too large following speed level

Vibration may be caused during the movement due to too large following speed level. Level 3 to 7 are recommended.

➤ Poor follower calibration

When the data stability and smoothness of capacitance and position stored in BCS100 is poor, vibration will be caused during the following movement. Please do follower capacitance calibration again, until the stability and smoothness becomes excellent or good.

➤ If there is a large interference at the field, users can appropriately reduce the parameter of “servo gain coefficient”.

### 2.2 The follower always hits the board during in following movement

➤ Too small calibration range or too large Z-axis speed

The smaller the calibration range, the smaller the deceleration distance of following movement. If Z-axis speed is too large and it is not reduced to 0 when the follower flows to place, overshoot will be unavoidable. The greater the Z-axis speed is,

the greater the overshoot is. When Z-axis speed is greater than 100mm/s, it is recommended to set the calibration range to be 15mm. When Z-axis speed is greater than 250mm/s, it is recommended to set the calibration range to be 20 to 25mm.

➤ Too small servo rigidity

Servo response may lag behind the control signals of controllers due to too small servo rigidity, and thus the follower will hit the board. For example, it is recommended

that the rigidity of Panasonic MINAS A5 series should not be below Level 13.

➤ Capacitance calibration

The follower will hit the board when there is a large deviation between the capacitance stored in BCS100 and actual measured capacitance. For example, the nozzle temperature increases a lot or the connection is not stable. Users need to first find the reason, and then calibrate capacitance again after solving the problem.

➤ No preheating

Please preheat the amplifier for 2 to 5 minutes, and then operate BCS100 controller after the sampling capacitance in the amplifier becomes stable.

➤ The locking nut of ceramic part is not connected tightly.

The locking nut of ceramic part is not connected tightly, which may lead to instable detecting capacitance.

### **2.3 The following height is different from the actual height**

No preheating

Please preheat the preamplifier for 2 to 5 minutes, and then operate BCS100 controller. The sampling capacitance in the preamplifier may changes with the changes **BCS100 Capacitive Height Controller**

in temperature. Please preheat the amplifier for 2 to 5 minutes, and then operate BCS100 controller after the sampling capacitance in the amplifier becomes stable.

Calibration problem

The phenomenon above often appears if the follower capacitance is not calibrated again after replacing the nozzle.

Nozzle temperature increases abnormally (above 100oC) because the laser scatter to the nozzle or the blowing is abnormal, and thus the capacitance of cutting head changes.

The follower does not hit the board in intelligent calibration, and the actual following height is higher than the setting height.

Please do calibration after closing the intelligent check option.

### **2.4 The follower cannot move up to the correct height**

If the follower cannot move up or the lift-up height is incorrect, users need to first observe and determine whether Z-axis coordinates are normal. If Z-axis coordinates get

less obviously, it is required to first return to the origin, press repeatedly “FOLLOW” and “SHUT”, and then observe whether Z-axis coordinates are consistent with each other after following to the board. If Z-axis coordinates continue to decrease, there may

be a problem in the position feedback of the system. The reason may be that: servo

motor or ball screw and coupling slide against each other, resulting in coordinate offset.

**2.5 “Validation error, failed ARM upgrading” when upgrading**

Upgrade file may be infected by computer virus.

**2.6 Follower moves up without contacting the board during calibration**

Uneedcnc